4gb15150.fm Page 1 Monday, July 8, 2002 7:00 PM

Instructions for use

Before using the washing machine

First wash cycle

Precautions and general recommendations

Description of the washing machine

Child lock

Detergents and additives

Care and Maintenance

Troubleshooting Guide

After-Sales Service

Transport and handling

Installation

Electrical connection

4gb15150.fm Page 2 Monday, July 8, 2002 7:00 PM

Before using the washing machine

1.Remove the packaging and check
- After unpacking, make sure that the washing machine is undamaged. If in doubt, do not use the washing machine. Contact After-Sales Service or your local dealer.
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, since it is a possible source of danger.

2.Remove the transit bolts
- The appliance is fitted with transit bolts to prevent internal damage during transport. **Before using the washing machine you must remove the transit bolts** (see “Installation/ Remove the transit bolts”).

3.Install the washing machine
- Install the appliance on a solid and level floor surface. In the case of a yielding sub-floor, the appliance should be installed in the corner of a room.
- Adjust the feet to ensure that the machine is stable and level on the floor (see “Installation/ Adjust the feet”).

4.Water inlet
- Connect the water supply inlet hose in accordance with the regulations of your local water company (see "Installation/Connect the water supply hose").
- Water supply: Cold water only
- Tap: 3/4” threaded hose connection
- Pressure: 100-1000 kPa (1-10 bar).

5.Drain hose
- Connect the drain hose to the ventilated siphon or hook it over the edge of a sink by means of the "U" bend (see "Installation/ Connect the water drain hose").

6.Electrical connections
- Electrical connections must be carried out by a qualified electrician in compliance with the manufacturer's instructions and local safety regulations.
- Voltage information, power consumption and electrical fusing data are supplied on the front panel behind the door frame.
- The appliance must be connected to the mains exclusively by means of a socket with an earth connection in accordance with established regulations. The appliance must be earthed by law. The manufacturer declines all liability for possible damage to property or injury to persons or pets deriving from failure to observe the a/m directions.
- Do not use extension leads or multi sockets.
- Before any maintenance on the washing machine disconnect the power plug or switch off the power supply.
- Access to the mains plug or to disconnection from mains supply via a double-pole switch must be ensured at all times following the installation.
- Do not operate the washing machine if it has been damaged during transport. Inform the After-Sales Service.
- Mains cable replacement is only to be carried out by After-Sales Service.
- The washing machine must only be used in the household for the prescribed uses.

Bauknecht

First wash cycle

We recommend that the first wash cycle be made without laundry.
This will remove any residual water used by the manufacturer in testing your washing machine.

1. Turn on the tap.

2. Close the appliance door.

3. Pour a small amount of detergent (about 30 ml) into the detergent dispenser .

4. Select a short wash programme (see programme chart).

5. Press the **"Start/Pause"** button.

Precautions and general recommendations

1. Packaging

- The packaging is 100% recyclable and is marked with the recycling symbol . Adhere to current local regulations when disposing of packaging material.

2. Disposing of packaging and old appliances

- The washing machine is built from reusable materials. The washing machine must be disposed of in compliance with current local waste disposal regulations.
- Before scrapping, pull out the mains plug and cut off the power cable so that the washing machine becomes unusable.
- The detergent residues should also be removed from the detergent dispenser, the drum, the water drain hose and pump before the washing machine is scrapped. The detergent residues might otherwise get into the groundwater during the disposal process and contaminate it.

3. Child lock

- The appliance must not be operated by children. Children must not be allowed to play with the washing machine or to climb into the drum.

4. General recommendations

- Never leave the appliance switched on unnecessarily. Turn off the tap.
- Before any cleaning and maintenance pull out the mains plug or switch off the power supply.
- To clean the outside of the washing machine, use a neutral detergent and a damp cloth.
- Do not use abrasive detergents.
- Never force the door open.
- If necessary, the power cable may be replaced with an identical one obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician.

5. EC Declaration of Conformity

- This washing machine has been designed, constructed and distributed in compliance with EC safety requirements:
  73/23/EEC Low Voltage Directive
  89/336/EEC EMC Directive
  93/68/EEC CE Marking Directive

CE

Description of the washing machine

1. Worktop
2. Control panel
3. Detergent dispenser
4. After-Sales Service sticker (on the front panel behind the door frame)
5. Door
6. Door handle
- To open the door pull the handle
- Close the door by pushing it firmly (the lock will click into place)

7. Adjustable feet

Child lock

We are pleased that you have chosen our washing machine with the extra-large capacity drum and wide door. They may also appeal to your young children, so we have taken special measures to protect youngsters who decide to play in or around the machine. These measures are intended to help busy parents, but remember that children should never play with the machine, whether it is running or not.

Door Opening
The door has NO special interlock, so it can be opened from inside without much force by a small child if the machine is not in operation. If the machine is switched on, the door is locked so that hot water or laundry cannot be thrown out.

Door lock
After the programme has started, the door is locked and approx. 0.5 l of water is rinsed into the drum. The door is then unlocked for a few seconds and subsequently locked until the end of the programme.
The "Door Locked" warning light goes on if the door is locked. If the door has to be opened during a programme, press the **"Start/Pause"** button. The "Door Locked" warning light goes out and the **"Start/Pause"** indicator flashes. The door can now be opened. The machine can be started again by shutting the door and pressing the **"Start/Pause"** button.
The door can never be opened in certain stages of the wash cycle, e.g. when the water is very hot or could run out. In these cases the door remains locked and the "Door Locked" warning light goes on again after the **"Start/Pause"** button has been pressed. If you still have an urgent need to open the machine, do not pull the plug out but press the "Reset" button. This drains all the water out, and the door can then be opened.

Child lock Button
You can prevent children turning the machine on by disabling the controls. To do this, simply PRESS and HOLD the "Child Lock" button for 5 seconds. An indicator light will come on and all controls will be disabled. Only the programme selector knob can be turned, so that the machine can be stopped immediately in an emergency. To do this, turn the knob to the "0" position. If the machine was already running a programme when the "Child Lock" was set, the programme will continue normally to the end, but it will be impossible to make any changes to the programme. If the machine is switched off after pressing the "Child Lock" button, it will be impossible to start another programme. If the programme selector knob is then turned to a programme position, the "Child Lock" indicator light flashes briefly indicating that it is activated. To switch off the lock at any time, PRESS the "Child Lock" button AGAIN and HOLD for 5 seconds.

Child lock screws (inside the door)
Activating the child lock
1. Open the door.
2. Using the insert from the detergent dispenser, turn the plastic screw underneath the handle anti-clockwise by about 180°. The screw now protrudes somewhat and the door cannot be closed.

Deactivating the child lock
1. Use the detergent dispenser insert to return the screw to its original position. The door can now be shut.

Detergents and additives

Pouring in detergents and additives

Pull out the detergent dispenser to its full extent.
Pour in detergent:

Chamber I
- Detergent for the pre-wash

Chamber II
- Detergent for the main wash
- Stain remover
- Water softener (water hardness 4)

When using liquid detergent, put the divider insert in the front slot ▷ and in the rear slot ▷ when using powder detergent (See marking).

Chamber
- Fabric Softener
- Liquid starch

Only add fabric softeners and conditioners up to the “Max” mark.

Chamber a
- Liquid chlorine bleach

Only add the liquid chlorine bleach up to the “Max” mark.
Only use this chamber if the “Bleach” column is shown on the enclosed programme chart.

Slide the detergent dispenser in until it clicks shut.

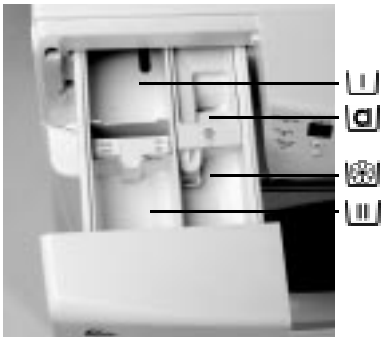

liquid detergent-
use front slot ▷

Divider insert

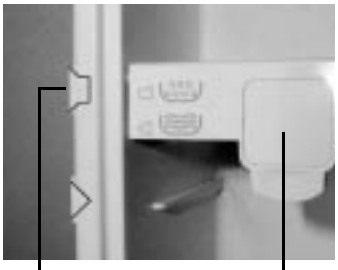

powder
detergent-
use rear slot ▷

Divider insert

Notes:

- Keep detergents and additives in a dry place and out of reach of children.
- If you use descaling agents, dyes or bleaches, make sure they are suitable for washing machine use. Descaler could contain components that can attack parts of your washing machine.
- Do not use solvents (turpentine, benzine, etc.)
  Do not machine wash fabrics that have been treated with solvents or flammable liquids.
- You can use liquid detergent in the "Prewash" phase for programmes with this option. In this case put only powder detergents in the compartment for the main wash .
- When using concentrated fabric softeners, dilute with water in the detergent dispenser up to "MAX" level mark.
- To prevent dispensing problems when using highly concentrated powder and liquid detergents, use the special detergent ball or bag supplied with the detergent and place it directly inside the drum.
  If you use gel-type detergent, please use the powder detergent insert setting.
- For Start Delay, only use powder detergent, please. Powder detergent remains in the detergent dispenser until the programme starts, but liquid detergents can run out of the detergent dispenser.
- If you use powder starch, proceed as follows:
  1. Wash your laundry using the desired wash programme.
  2. Next mix the starch with water in a cup.
  3. Set the “Rinse and Spin” programme, reduce the speed to ca. 800 rpm and start the programme.
  4. Pull the detergent dispenser out until you can see about 3 cm of the chamber.
  5. While the water is running into the detergent dispenser, pour the starch solution into the chamber.
  6. If there are starch residues in the detergent dispenser after the end of the programme, clean it if necessary (see "Care and Maintenance").
     Observe also the starch manufacturer's information.

Care and Maintenance

Appliance exterior and control panel

- Clean using normal household cleaner (do not use abrasive products or solvents).
- Dry with a soft cloth.

Door seal

- Clean occasionally with a damp cloth.
- Check the seal folds for foreign bodies periodically.

Detergent dispenser

1. Press the release lever in the prewash compartment down and pull out the dispenser.
2. Remove the inserts from the detergent dispenser.
3. Clean all parts under running water.
4. Replace the separate parts in the detergent dispenser and slide the dispenser back into the opening.

Periodically check and clean the mesh filters in the water connection.

1. Turn off the tap.
2. Unscrew the water inlet hose from the tap.
3. Clean the internal filter.
4. Screw the supply hose back onto the tap.
5. Unscrew the supply hose from the washing machine.
6. Clean the mesh filter in the washing machine.
7. Screw the supply hose back on to the machine.
8. Turn on the tap and ensure that the connections are water-tight.

Troubleshooting Guide

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately. Often, however, the faults detected are small enough to be solved in a matter of minutes. For example:

The appliance will not start; no lamp lights up.
Check whether:
- the appliance is plugged in;
- the wall socket is functioning correctly (use a table lamp or similar to test);
- a programme is selected correctly.

The appliance will not start, but the "Start/ Pause" lamp is flashing.
Check whether:
- the appliance door is properly closed (child lock);
- the programme has been changed;
- the water tap is turned on. If not, turn the tap on and press the **"Start/Pause"** button.

The appliance stops during the programme.
Check whether:
- the **"Rinse Hold"** lamp is on. Terminate this option by pressing the button again;
- another programme has been selected. Reselect the desired programme and press the **"Start/Pause"** button;
- **"Start/Pause"** lamp goes on. Press **"Start/Pause"** button;
- The appliance safety system has been activated. See fault description table.

Detergent and additives incorrectly washed in.
Check whether:
- the detergent dispenser inserts are incorrectly located (see "Care and Maintenance");
- enough water is being supplied. The mesh filters in the water connection could be blocked (see "Care and Maintenance").

The appliance vibrates during the spin cycle.
Check whether:
- the appliance is levelled and solidly installed on all four feet (see "Installation");
- the transit bolts have been removed. Before using the washing machine you must remove the transit bolts (see "Installation").

Final spin results are poor:
The appliance has an imbalance detection and correction system. If individual heavy articles are loaded (bathmat, bathrobe, etc.) this system may reduce the spin speed automatically to protect the appliance or even interrupt the spin cycle altogether, if the imbalance is too great even after several spin starts.

- If the laundry is still too wet at the end of the cycle, add other articles of laundry and repeat the spin cycle.
- Excessive foam formation may prevent spinning. Ensure correct amount of detergent is used.
- Check whether the spin speed has been reduced to 0.

No water or insufficient water pressure for appliances with safety hose:
- the appliance has a safety hose and the safety valve has opened (red indicator in the safety valve inspection window).
  In this case replace it with a new safety hose.

What should I do when the automatic safety system detects a malfunction?

The programme is interrupted and various indicators (if available) point to the source of the fault.

Fault description table

Small lamp lights up	Digital display	Fault description
"Water tap closed"	"FH"	"Water inlet fault"
-	"FP"	"Draining fault"
-	from "F4" to "F21"	"Electrical components fault"
"Water Stop"	"FA"	"Water Stop fault"

a. Water inlet fault (no water or insufficient water pressure)

The "Water tap closed" indicator is on and the digital display shows "FH" Switch off the appliance by turning the programme selector to the "O" position and unplug it.

Check whether:
- the water tap is open and the water supply pressure is sufficient;
- the water inlet hose is kinked;
- the mesh filter between the tap and the hose is clean (see "Care and Maintenance" / "Mesh filter in water connection");
- the water supply hose is frozen up.

Connect the appliance to the electrical supply.

Reselect the desired programme and press the **"Start/Pause"** button again to continue with the programme (do not add detergent for this programme).

b. Draining fault

The digital display shows "FP". Switch off the appliance by turning the programme selector to the "O" position and unplug it.

Check whether:
- the drain hose is kinked (see "Installation");
- the drain hose is frozen.

Connect the appliance to the electrical supply.

Reselect the desired programme and press the **"Start/Pause"** button again to continue with the programme (do not add detergent for this programme).
If the fault re-occurs, contact After Sales Service (See "After-Sales Service").

c. Electrical module fault

The digital display shows "F4" to "F21".
- Set the programme selector to the "O" position, select the desired programme and press the **"Start/Pause"** button again. The programme will continue.
- If the fault re-occurs, contact After Sales Service (See "After-Sales Service").

d. Water Stop fault

An audible tone sounds. The light of the Water Stop indicator goes on. The digital display shows "FA" and the pump is running.

The "Water Stop fault" may have been triggered by:
- too much foam.
- a leak in the appliance, water running into the water tank.

1. Switch off the appliance by turning the programme selector to the " ○ " position, unplug the appliance and turn off the tap.
2. Tilt the appliance forwards carefully to allow the collected water to flow out,
3. Plug the washing machine in again and turn on the tap,
4. Reselect the desired programme and press the **"Start/Pause"** button (there is no need to add additional detergent). The programme will continue. If the faults occurs again, call After-Sales Service with details about the fault (see "After-Sales Service"),
5. If the **"Start/Pause"** button is not pressed but water is still flowing into the machine, turn off the water supply and inform After Sales Service (see "After-Sales Service").

After-Sales Service

Before contacting After-Sales Service:

1. Try to remedy the problem yourself (see "Troubleshooting Guide").
2. Restart the programme to check whether the problem has solved itself.
3. If the machine continues to function incorrectly, call After-Sales Service.

Specify:

- The nature of the problem.
- Appliance and model number.
- The service code (number after the word SERVICE).

SERVICE 0000 000 00000

The After-Sales Service sticker is on the front panel behind the door frame.

- Your full address.
- Your telephone number and area code. After-Sales Service phone numbers and addresses are given on the guarantee card or consult the local dealer.

Transport and handling

1. Pull out the power plug.
2. Turn off the tap.
3. Remove the water supply and drain hose from the service connection.
4. Empty the water supply hose and the water drain hose completely.
5. Always fit the transit bolts (see "Installation/Remove transit bolts").

Installation

Remove the transit bolts

1. Slacken the four bolts with the spanner supplied. In addition, open the plastic loop wrapped round the power cable.
   Do not cut the loop.
2. Unscrew the bolt by hand.
3. Grip the bolt and remove it through the large aperture.
4. Seal the resulting holes using the plastic caps supplied. To do this, insert the caps in the wide part of the hole in the direction of the arrow and push them into the narrow groove until they click into place.
5. **Keep the transit bolts for future use.**

- Whenever the appliance is transported, the transit bolts must be refitted:

1. Raise the plastic covers with a screwdriver, slide them in the opposite direction of the arrow and remove.
2. Insert the transit bolts in the reverse order.

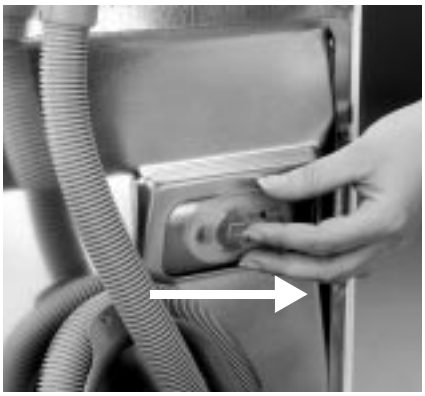

Adjust the feet

Small unevennesses in the floor can be compensated for by screwing the four appliance feet up or down (never use pieces of wood, cardboard or similar material):

1. The washing machine must be installed horizontally in width and depth. Use a spirit level.
2. Loosen the locknut clockwise using the wrench provided.
3. Adjust the height of the foot by hand.
4. Tighten the locknut anti-clockwise to the washing machine.

If the appliance is to be installed on a wooden floor, distribute the weight by placing it on a 70 x 70 cm sheet of plywood at least 3 cm in thickness.
Screw the plywood sheet to the floor.

Connect the water supply hose

1. Carefully screw the hose connection onto the tap, preferably by hand.

2. Make sure there are no kinks in the hose.

3. Check water-tightness of tap and appliance connections by turning the tap completely on.

The appliance **must not be** connected to the mixing tap of a non-pressurized water heater.
The appliance can be connected without a non-return valve.
Check the supply hose regularly for brittleness and cracks and replace if necessary using a new hose of the same type (available from After-Sales Service or specialist dealer).
If the flexible hose is damaged, unplug the appliance from the mains immediately.

Water supply hose “A”

If the hose is too short, replace it with a suitable length of pressure resistant hose (minimum 1000 kPa - EN 50084 approved type).
Mount the new hose professionally on the washing machine and the tap.

Water supply hose “B”

If the hose is too short, replace it with a longer length of “Water Stop” hose (available from After-Sales Service or specialist dealer).
Mount the new hose professionally on the washing machine and the tap.
Note: The inlet hose and the plastic enclosure at the water connection contain electrical components. **For this reason, do not cut the hose and do not immerse the plastic enclosure in water.**

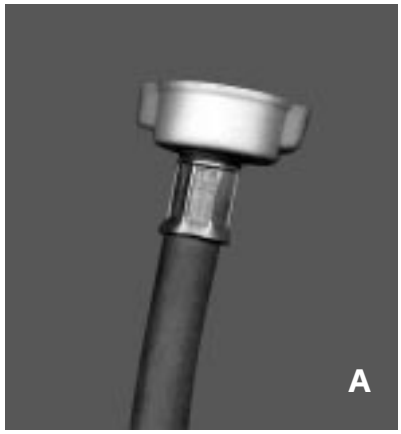

Connect the water drain hose

1. Connect the drain hose to the ventilated siphon or hook it over the edge of a sink with the “U” bend.

2. Make sure there are no kinks in the hose.

3. Secure the hose so that it cannot fall down while the appliance is running.
Small wash-hand basins are unsuitable.
If you need to add an extension, use a hose of the same type. Secure the connections with clips.
Max. drain hose length: 2.50 m
Max. drain height: 1.25 m
Min. drain height: 0.70 m

4gb15150.fm Page 14 Monday, July 8, 2002 7:00 PM

Electrical connection

1) For Great Britain only

Warning - this appliance must be earthed

Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:

1. Remove the fuse cover (**A**) and fuse (**B**).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.

Replacement fuse covers are available from your local electrical store.

2) For the Republic of Ireland only

The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type.

3) Socket outlet / plug (valid for both countries)

If the fitted plug is not suitable for your socket outlet, Please contact Whirlpool Service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufactures instructions and current standard safety regulations.

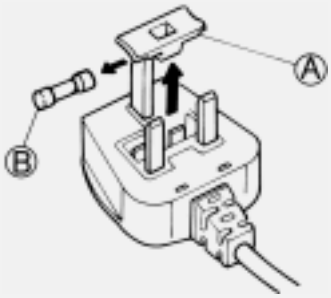

Ecological Paper

Printed in Italy
5019 401 15150
GB
1/0702